
 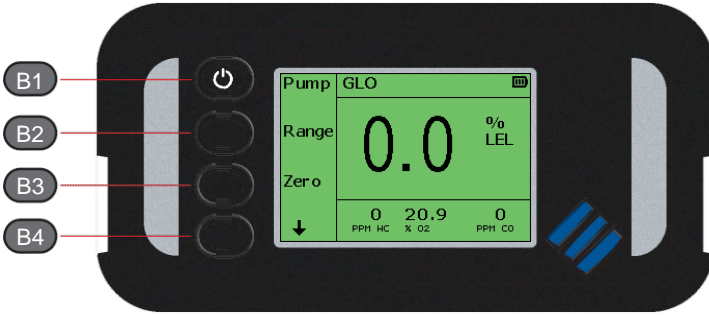


Gasurveyor 700

Quick Operation Guide



Switch On

2s

B1

Sensor Check...

Pump GLO

Range 0.0 %LEL

Zero 0 PPM HC 20.9 % O2 0 PPM CO

Switch Off

4s

B1

Off in 3

Off in 2

Off in 1

Mode Selection

Mode

- B1** Gas Leak Outdoors
- B2** Purge
- B3** Search
- B4** Confined Space

Pump On / Off

Pump GLO

Range 0.0 %LEL

Zero 0 PPM HC 20.9 % O2 0 PPM CO

B1

Pump Pump Off

Sample Fault

Pump Sample Fault

B1

Pump GLO

Range 0.0 %LEL

Zero 0 PPM HC 20.9 % O2 0 PPM CO

i Clear blockage

Zeroing

B3

Pump GLO

Range 2.9 Zero

Zero 0 PPM HC 20.9 % O2 0 PPM CO

i Fresh air

Pump GLO

Range Zeroing

Zero 0 PPM HC 20.9 % O2 0 PPM CO

Alarm Acknowledge

B3

i Fresh air

CSM

35 %LEL

20.8 %O2

Ack 0 PPM H2S

0 PPM CO

CSM

HIHI %LEL

20.8 %O2

Ack 0 PPM H2S

0 PPM CO

CSM


0 %LEL

20.9 %O2

View 0 PPM H2S


Mode 0 PPM CO

Pipeline Gas Test (all modes)

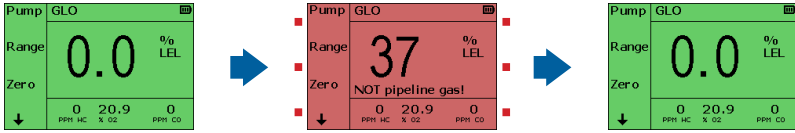

i Fresh air


Barhole Test - New Series

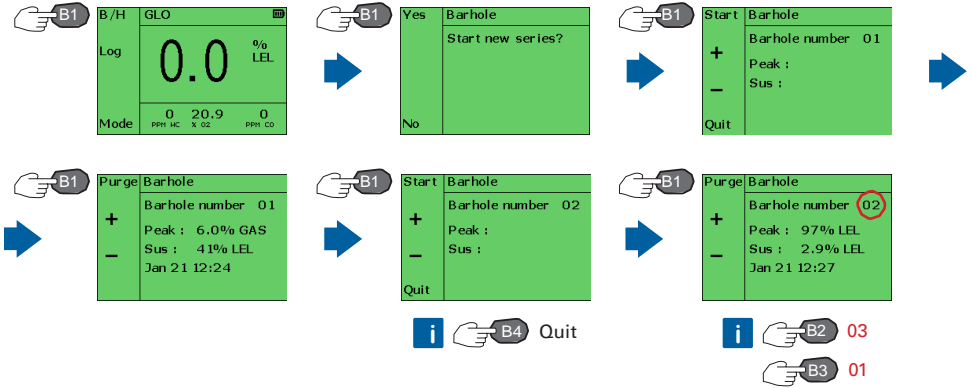

i **B4** Quit

i **B2** 03
B3 01

Battery Replacement

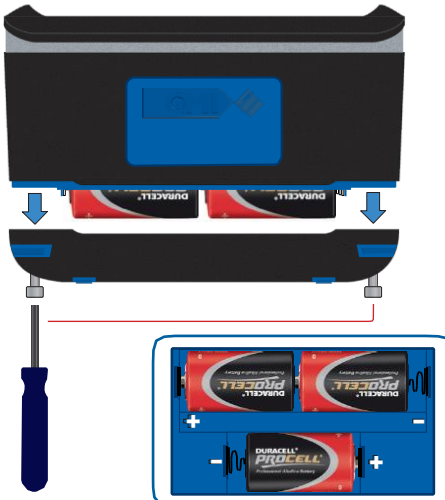

Charging

